


CABINET ASSEMBLY

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PA4120-1079G001	Document Hopper Assy.	1	
	2	2PP4120-1084P001	Sub-Hopper Plate	1	
	3	41271001	NCU Cover	1	
	4	1PP4120-1089P001	Main Cover	1	
	5	2PA4083-6130G001	Manual Feed Guide Assembly	1	
	6a	41143901	Board-INU	1	ODA
	6b	41143902	Board-INU	1	AUS
4	6c	41143904	Board-INU	1	OLA/INT/CHN
	6d	41143905	Board-INU	1	NO-EC
	6e	41143501	Board-EN9	1	OEL/TENOVIS(BOSCH)
	7				
	8	3PP4120-1088P001	Partition Plate	1	
	9	1PP4120-1090P001	Rear Cover	1	
	10	1PP4120-1093P001	Stacker Cover	1	
	15	41632001	Film Assist	3	

Section 1 CABINET ASSEMBLY

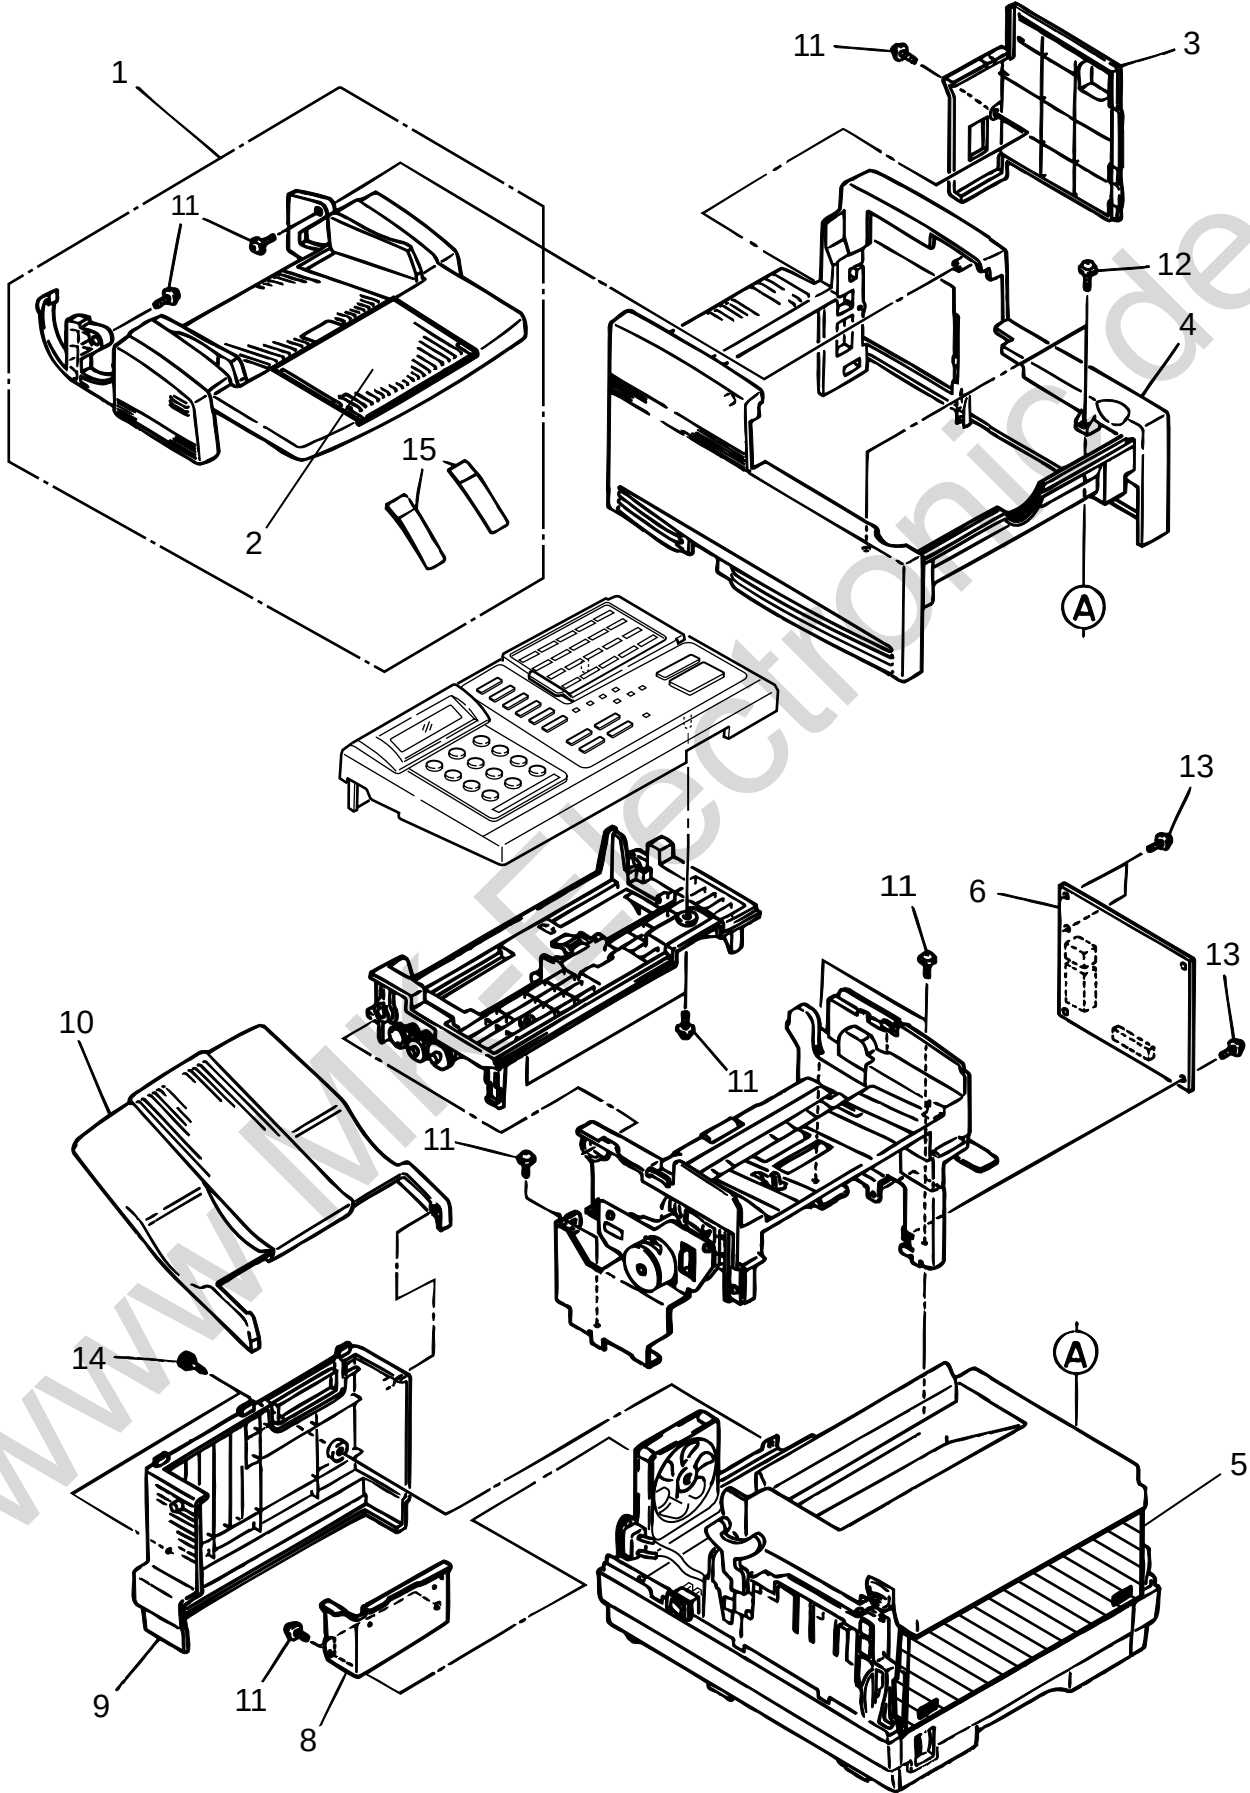


CONTROL PANEL ASSEMBLY

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1a	41260801	Cover Assy.-OP Panel (ODA)	1	ODA/OLA
	1b	41260802	Cover Assy.-OP Panel (OEL)	1	OEL/NO-EC Note 1
	1c	41260803	Cover Assy.-OP Panel (INT)	1	OKI-INT/AUS
4	1d	41260805	Cover Assy.-OP Panel (CHN)	1	CHN
	2	41261401	Film-Onetouch	2	Note 2
	3a	41261301	Sheet-Onetouch	1	Note 2
	3b	41261303	Sheet-Onetouch	1	TENOVIS(BOSCH) Note2
4	3c	41261305	Sheet-Onetouch	1	CHN
	4a	41261201	Sheet-Function	1	OKI Note 2
	4b	41261202	Sheet-Function	1	TENOVIS(BOSCH)
4	4c	41261205	Sheet-Function	1	CHN
	5a	4PB4014-4776P201	Ten Key Label	1	ODA/OLA
	5b	4PB4014-4776P211	Ten Key Label	1	OKI-INT/AUS
	5c	4PB4014-4776P221	Ten Key Label	1	TENOVIS(BOSCH)
4	5d	40620401	Sheet-Ten Key	1	CHN
	6a	41261302	Sheet-Onetouch	1	OKI Note 2
	6b	41261304	Sheet-Onetouch	1	TENOVIS(BOSCH) Note 2
4	6c	41261306	Sheet-Onetouch	1	CHN
	7	41261001	Cover-Onetouch	1	
	8	41178701	Board-P60	1	
	9a	40732601	Button-Start	1	OKI
	9b	40732603	Button-Start	1	TENOVIS(BOSCH)
	10a	40732701	Button-Stop	1	OKI
	10b	40732703	Button-Stop	1	TENOVIS(BOSCH)
4	11	40732804	Button-Ten Key	1	

Note 1: Not includes items 2, 3, 4, 5, 6, 9, 10 for OEL version.

Note 2: Parts will be supported in OEL.

Section 2 CONTROL PANEL ASSEMBLY

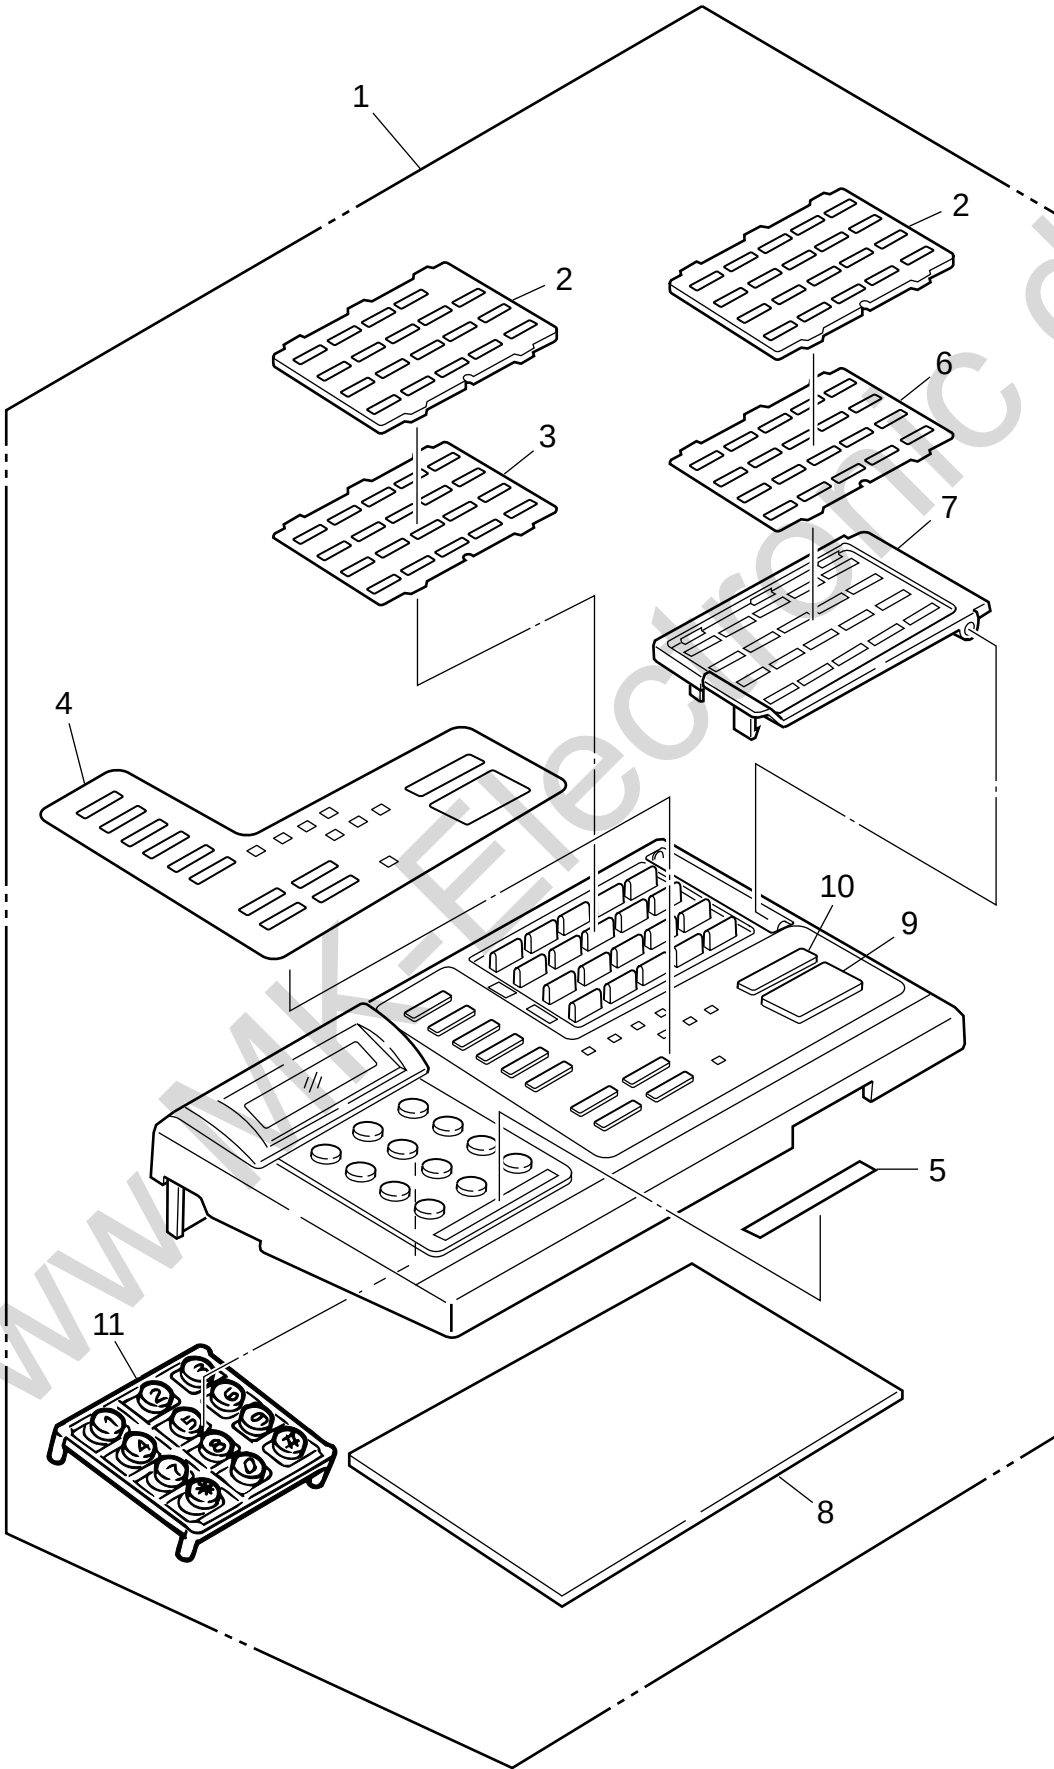


PRINTER ASSEMBLY

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	2PA4120-1214G001	Stacker Cover Assy.	1	
	2	4PB3517-1567P001	Guide Wire	1	
	3	4YB4120-1117P001	Pulse Motor (Main)	1	
	4	4YB4120-1118P001	Pulse Motor (Resist)	1	
	5	4PP4083-2593P001	Idle Gear A	2	
	6	3PP4083-6076P001	Reduction Gear	1	
	7				
	8a	2YX4120-1128G001	Fusing Unit Assy. (120V)	1	ODA
	8b	2YX4120-1128G002	Fusing Unit Assy. (230V)	1	Except ODA
4	8c	40625701	Heat Assy.	1	CHN only
	9	3PA4122-1295G001	Hopping Roller Assy.	1	
3	10	4PP4083-6022P002	Bearing A	4	
	11	4PP4083-6086G001	Toner Sensor Assembly	1	
	12	4PP4083-6083P001	Sensor Plate (Inlet)	3	
	13	4PB4083-6024P001	One-way Clutch Gear	2	
	14	4PP4083-6080P001	Idle Gear B	1	
	15	3PP4083-6054P001	Reset Lever (R)	1	
	16	4PP4083-6081P001	Idle Gear C	1	
4	17a	3PB4083-6030P001	Resistration Roller	1	
4	17b	40806601	Roller-Regist	1	CHN only
	18				
3	19	42037001	Roller Assy.-TR F	1	
	20	3PB4083-6064P002	Back-up Roller	1	
	21	4PP4083-6052P001	Bush A	2	
	22	4PP4083-6065P001	Bias Spring A	2	
	23	1PP4083-6035G001	Lower Base Sub Assy.	1	
	24	3PP4083-6058P001	Switch Arm Lever	1	
	25	3PP4083-6053P001	Reset Lever (L)	1	
	26	4PP4083-6057P001	Reset Spring	1	
	27	4PB4083-6197P001	Dumper Frame	1	
	28	4PP4083-6191G001	Dumper Arm Assembly	1	
	29	4PA4083-6025G001	Eject Sensor Lever Assembly	1	
	30	2PA4120-1129G001	Eject Roller Assy.	1	
	31	2PA4120-1085G001	Release Guide Assy.	1	
	32	4PP4120-1087P001	Release Spring	1	
	33	4YA4116-1228G001	LED Head Unit	1	
2	34	2241002P0140	PX-14B PC Connector	1	* 1
2	35	41857101	LED CABLE ASSEMBLY	1	* 1
	42	40778901	Sensor Wire Assembly	1	
	43	4PP4120-1209P001	Washer B	1	
	44	4PP4120-1210P001	Washer C	1	
	45	3PP4083-6071G001	Motor Plate Assembly	1	
	46a	3PB4120-1105P001	Halogen Lamp (Q)-F120	1	
	46b	3PB4120-1105P002	Halogen Lamp (Q)-F230	1	
	47	4PB4083-6106P001	Heat Sensor	1	
	48	4PB4083-6293P001	Thermostat A	1	
	49	4PB4083-6128P001	Bearing B	2	
	50	4PP4083-6113P001	Gear A	1	
	51	4PP4083-6031P001	Bearing R	1	
3	52	40559101	Spring-Compression R(I/D)	2	

* 1: The parts is used for OKIFAX 5650 produced from June-2001 onwards.

Section 3 PRINTER ASSEMBLY

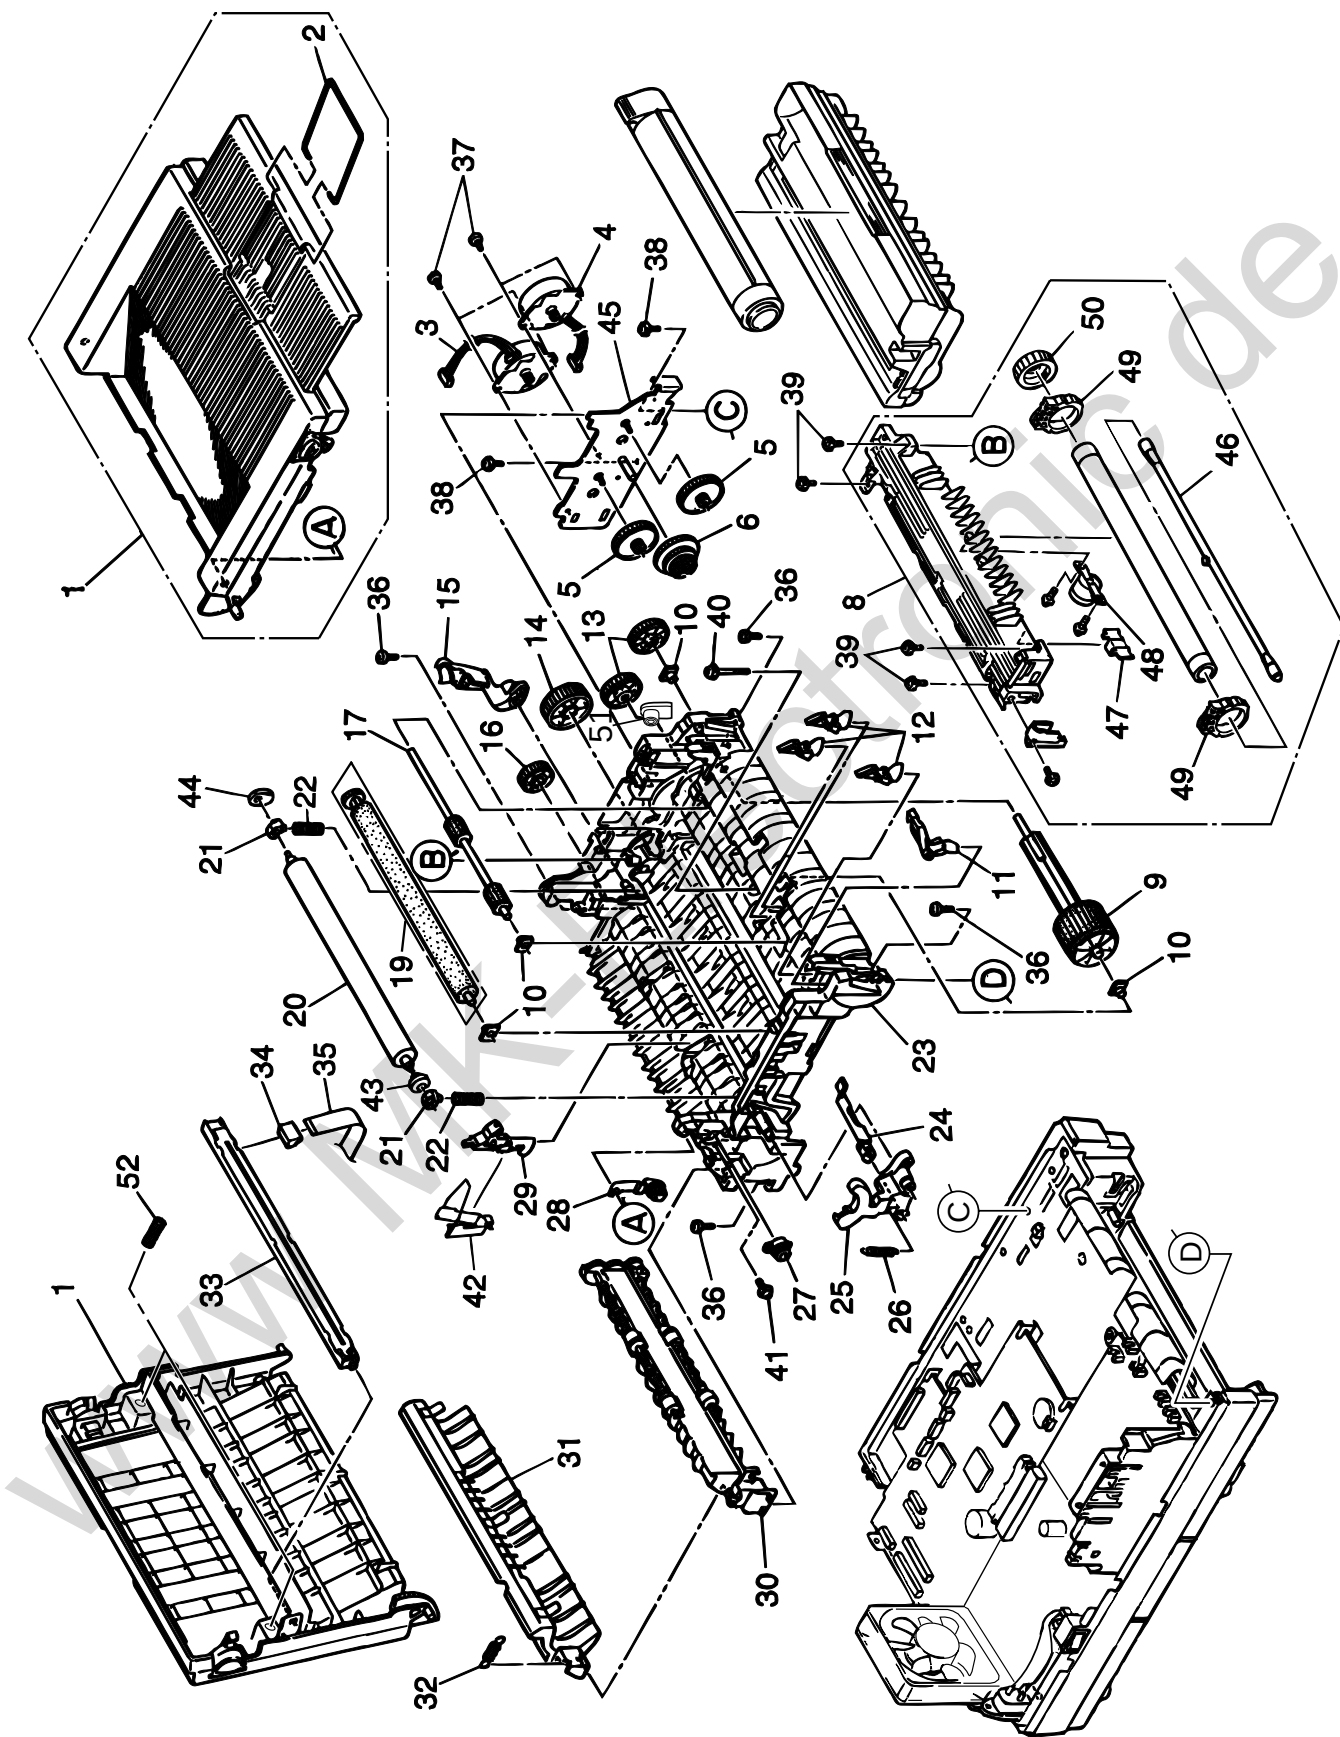


BASE ASSEMBLY

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1a	41069901	PWR unit-ACDC Switch	1	(120V) ODA
	1b	41067001	PWR unit-ACDC Switch	1	(230V) Except ODA
	2	3PA4083-6090G001	Contact Assy.	1	
	3	41144001	Board-H08	1	
2	4a	41616402	PCB Unit-M60-2	1	* 1
2	4b	41900801	PCB Unit-M60-2 Spare Parts Kit	1	* 2
4	4c	41616401	PCB Unit-M60	1	CHN only
	5	2YX4076-7012G001	Cassette Guide (R) Assy.	1	
	6	3PP4083-7653P001	Cassette Lock Lever	2	
	7	4PP4083-7655P001	Cassette Lock Spring	2	
	8	4PP4122-1170P001	Link Pull Lever	2	
	9	4PP4083-7666P001	Sheet Spring	2	
	10	4PP4083-7658G001	Sheet Link (R) Assy.	1	
	11	1PA4120-1162G001	Paper Cassette Assy.	1	
	12	40259701	Frame Assy.-Sepa	1	
	13	3PP4083-7660P001	Beam Plate	2	
	14	2PA4076-7011G001	Cassette Guide (L) Assy.	1	
	15	1PP4120-1078P001	Base Plate	1	
	16	3PP4083-6154P001	Cassette Detection Lever	1	
	17	4PP4083-7667P001	Paper End Sensor Lever	1	
	18	2PB4120-1103P001	Insulator Plate	1	
	19	41348401	Motor-Fan DC	1	
	20				
	25	4PP4083-7657G001	Sheet Link (L) Assy.	1	
	26	4PP4083-7662P001	FG Plate C	1	
	30				
2	31	41861904	Card-I/F Spare parts	1	Option
	32				
	33	4PP4083-7665P001	FG Plate D	1	
	34	4YC4061-5115P001	Polyethylene Tape	2	
	35				
	36				
	37				
	38				
	39				
	40				
	41	41319501	Bracket-Support PSU	2	
	42	41076201	Spacer-Rubber PSU	1	

* 1: The parts is used for OKIFAX 5650 produced from June-2001 onwards.

* 2: This spare parts kit includes Item No.33-34 : 2241002P0140 PX14B PC Connector, and Item No.33-35 :41857101 LED CABLE ASSEMBLY, and Item No.4a :


Section 4 BASE ASSEMBLY

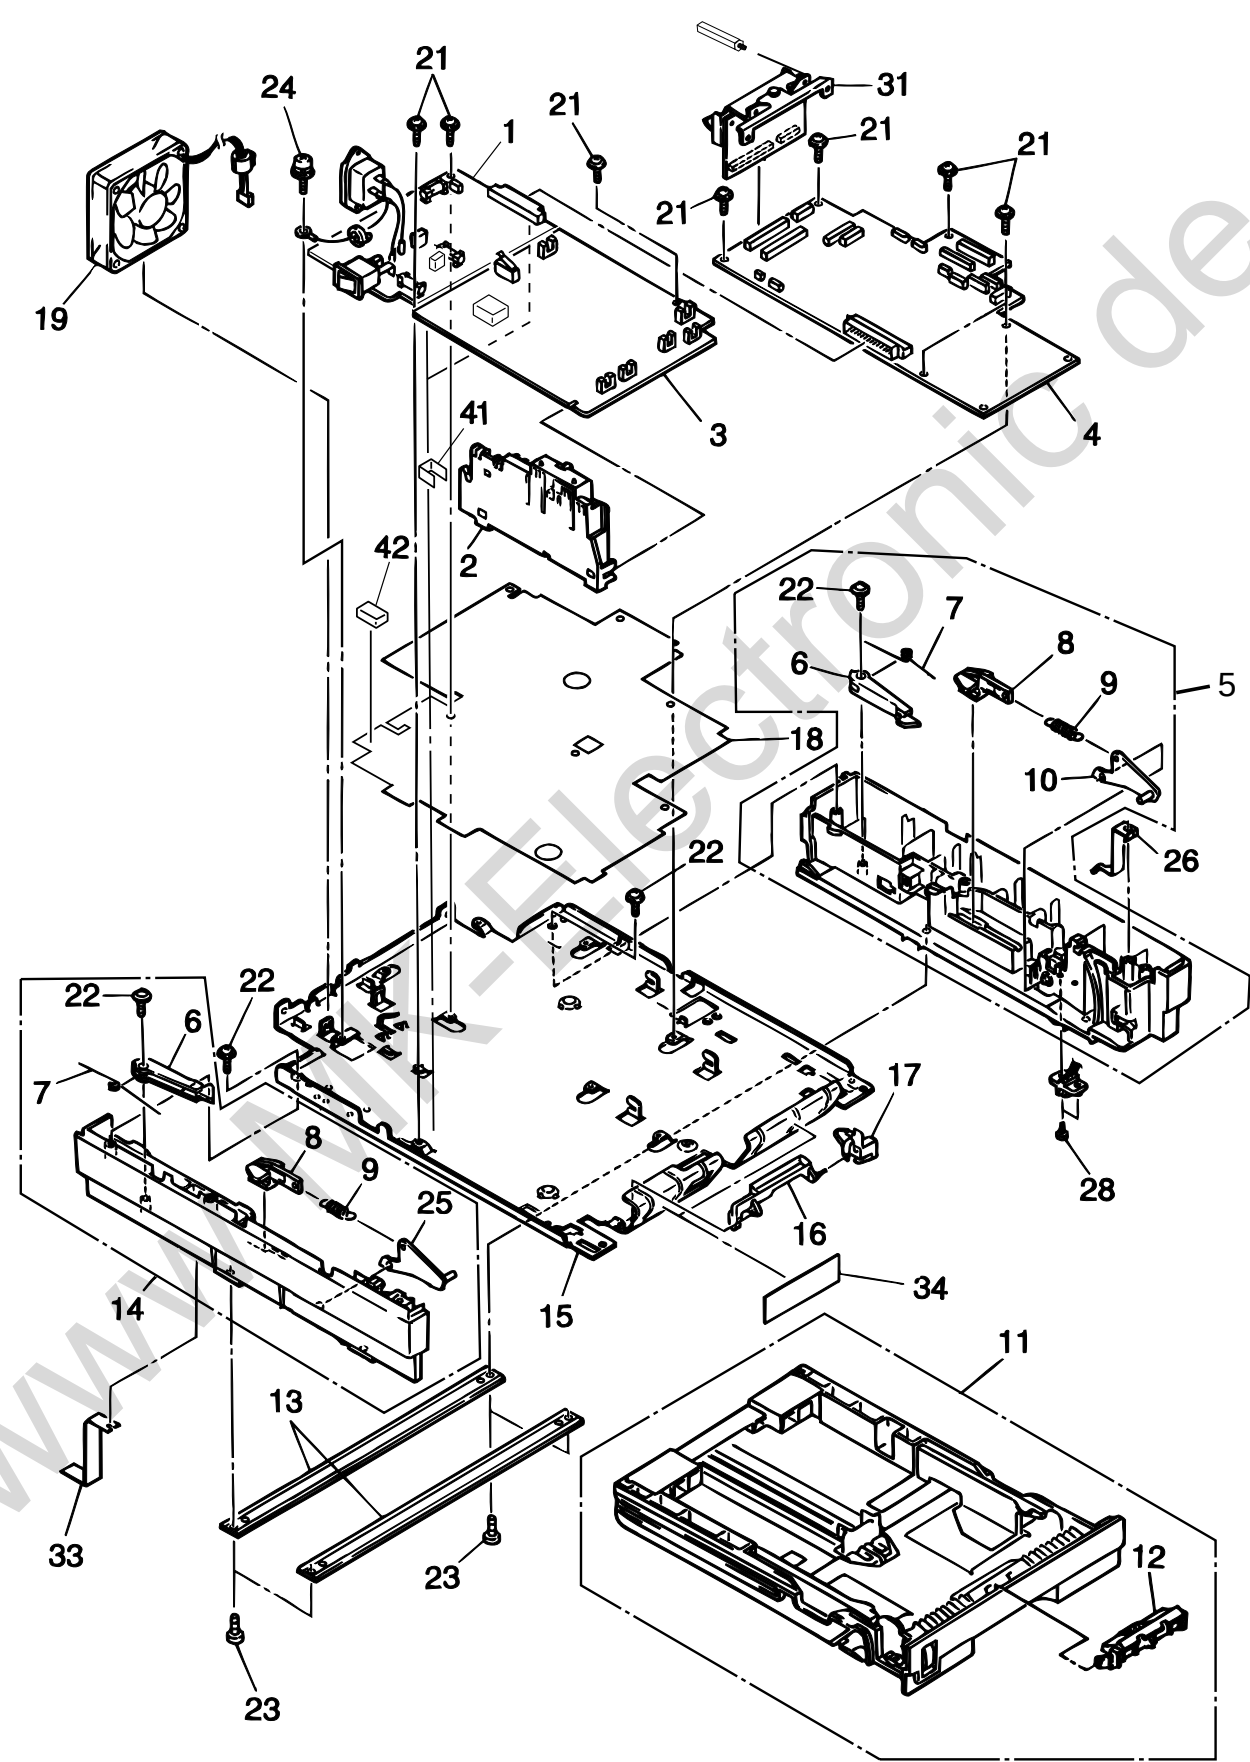

SCAN UNIT

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1015P001	Scanner Frame	1	
	2	2PP4120-1034P001	Scanner Base Frame (L)	1	
	3	4PP4120-1023P001	Earth Plate ADF	1	
	4	3PP4120-1017P001	PC2 Lever	1	
	5	3PP4120-1016P001	PC1 Lever	1	
	6	3PP4120-1038P001	Pocket Plate	1	
	7	2PP4120-1037P001	Scanner Base Frame (R)	1	
	8	4PP4120-1032P001	Latch Spring	2	
	9	4PP3529-5045P001	Pinch Roller	1	
	10	4PP4120-1020P001	Pinch Roller Shaft	1	
	11	4PP4120-1022P001	Pinch Spring R	1	
	12	4PP4120-1021P001	Pinch Spring L	1	
	13	4PP3529-5033P001	Gear (Z20)	1	
	14	4PA3529-5082G001	Sub-roller Assy.	1	
	15	2PP4120-1029P001	Scanner Bottom Plate	1	
	16	4PP3529-5039P001	Gear (Z81/15)	1	
	17	4PB3527-5803P001	Mini Clamp Holder	4	
	18	40135301	Photo-Interrupter	2	
	19	4PP4120-1030P001	Sensor Spring	1	
	20	40141401	Contact Image Sensor-A4	1	300DPI
	21	3PA4120-1018G001	ADF Roller Assy.	1	
	22	40047601	Motor-S (FX-VP)	1	
	24	4PB4120-1024P001	Eject Pinch Roller	1	
	25	4PP4120-1025P001	Eject Pinch Spring	2	


Section 5 SCAN UNIT

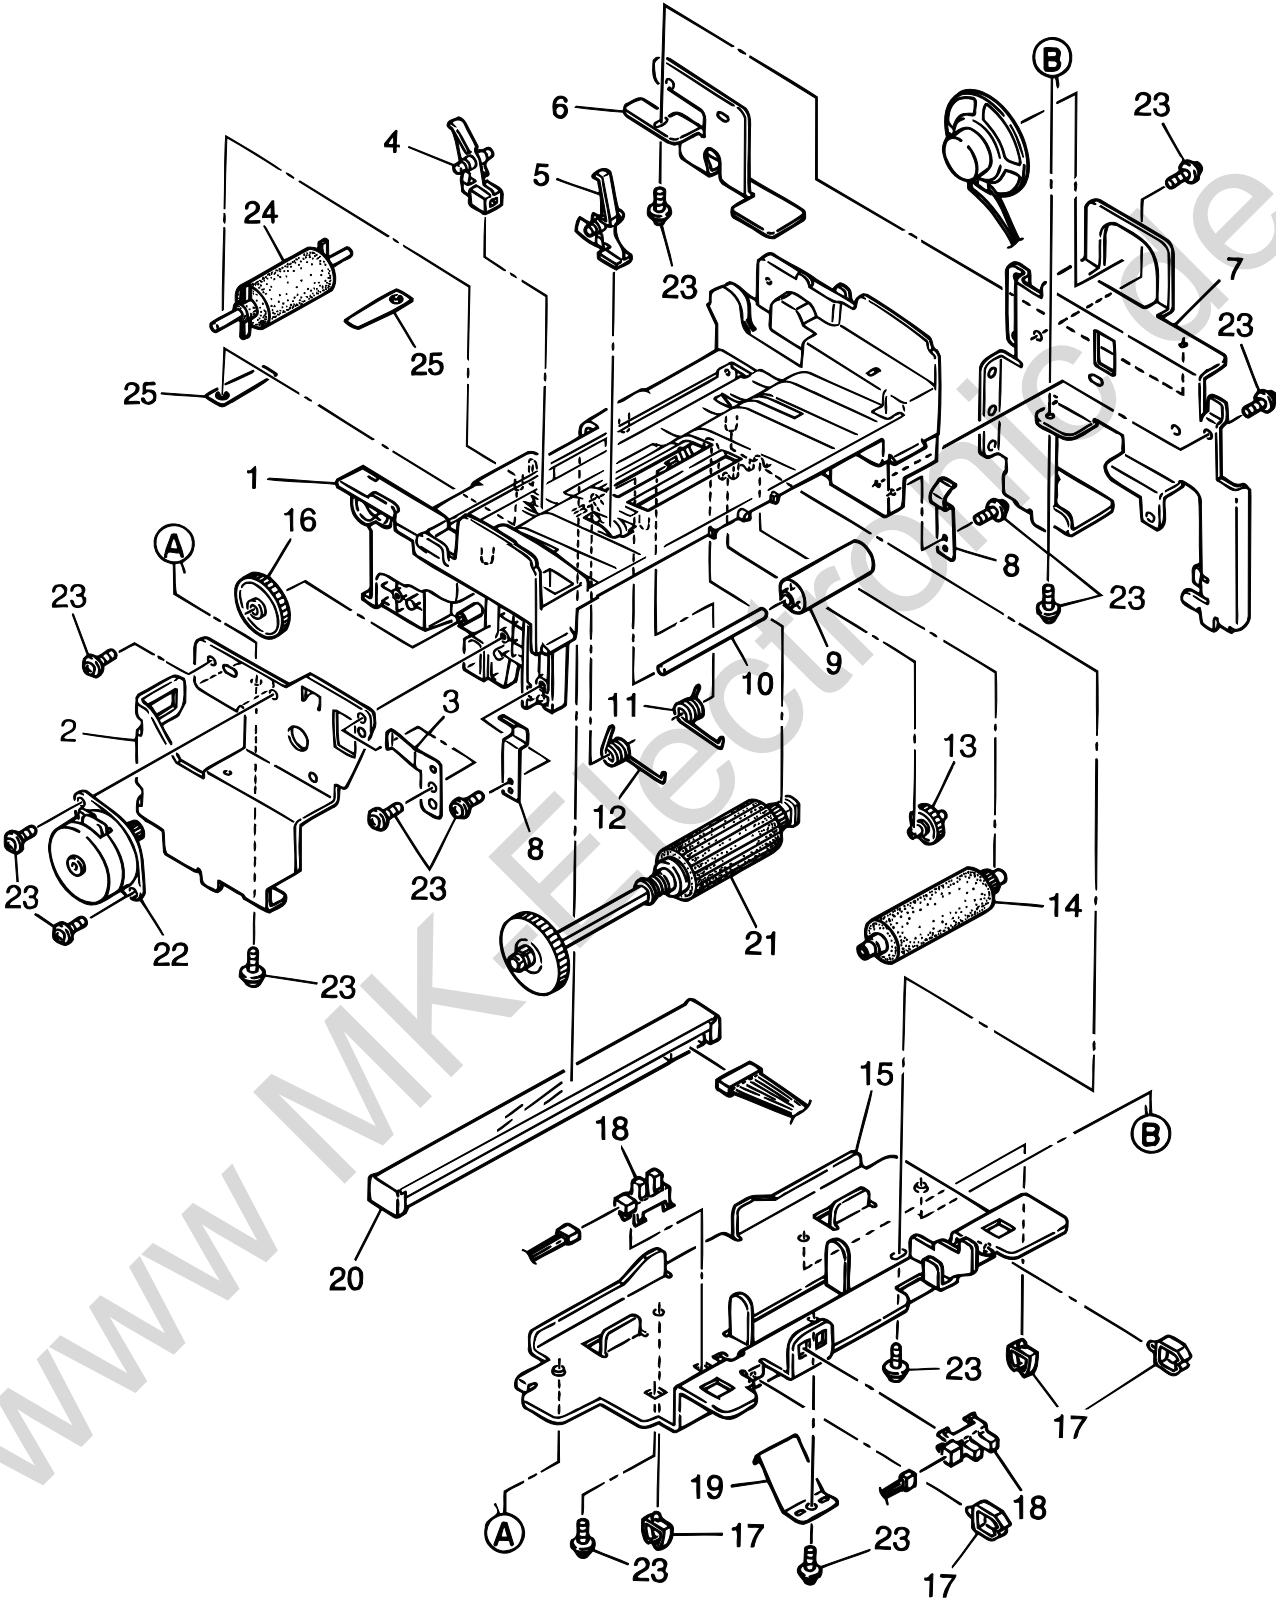

PAPER GUIDE U ASSEMBLY

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	3PA4120-1045G001	Feed Roller (1) Assy.	1	
	2	4PP4120-1226P001	Earth Plate (SR)	1	
	3	4PP4120-1227P001	Earth Plate (SL)	1	
	4	4YS4011-1714P002	Earth Cord	1	
	5	1PP4120-1040P001	Paper Guide (U)	1	
	6	4PA4120-1041G001	Pinch Plate Assy.	1	
	7	4PB4120-1051P001	Diselectrification Brush	1	
	8	4PP3529-5035P001	Gear (Z28)	1	
	9	4PA3529-5087G001	Separation Rubber Assy.	1	
	10	3PA4120-1049G001	Sensor Roller Assy.	1	
	11	4PP3529-5034P001	Gear (Z22)	1	
	12	3PA4120-1052G001	Exit Roller Assy.	1	
	13	4PP3527-5153P001	Back-up Plate	1	
	14	4PP4120-1044P001	ADF Spring	1	
	15	4PB4120-1051P002	Diselectrification Brush	2	
	16	4PP3522-3568P001	Bearing ADF	2	
	18	4YS4011-1714P003	Earth Cord	1	
	19	4PP3527-5034P001	Gear (Z16)	2	
	20	4PB4013-3501P003	CS-Ring (CS4-SUS)	2	

Section 6 PAPER GUIDE U ASSEMBLY

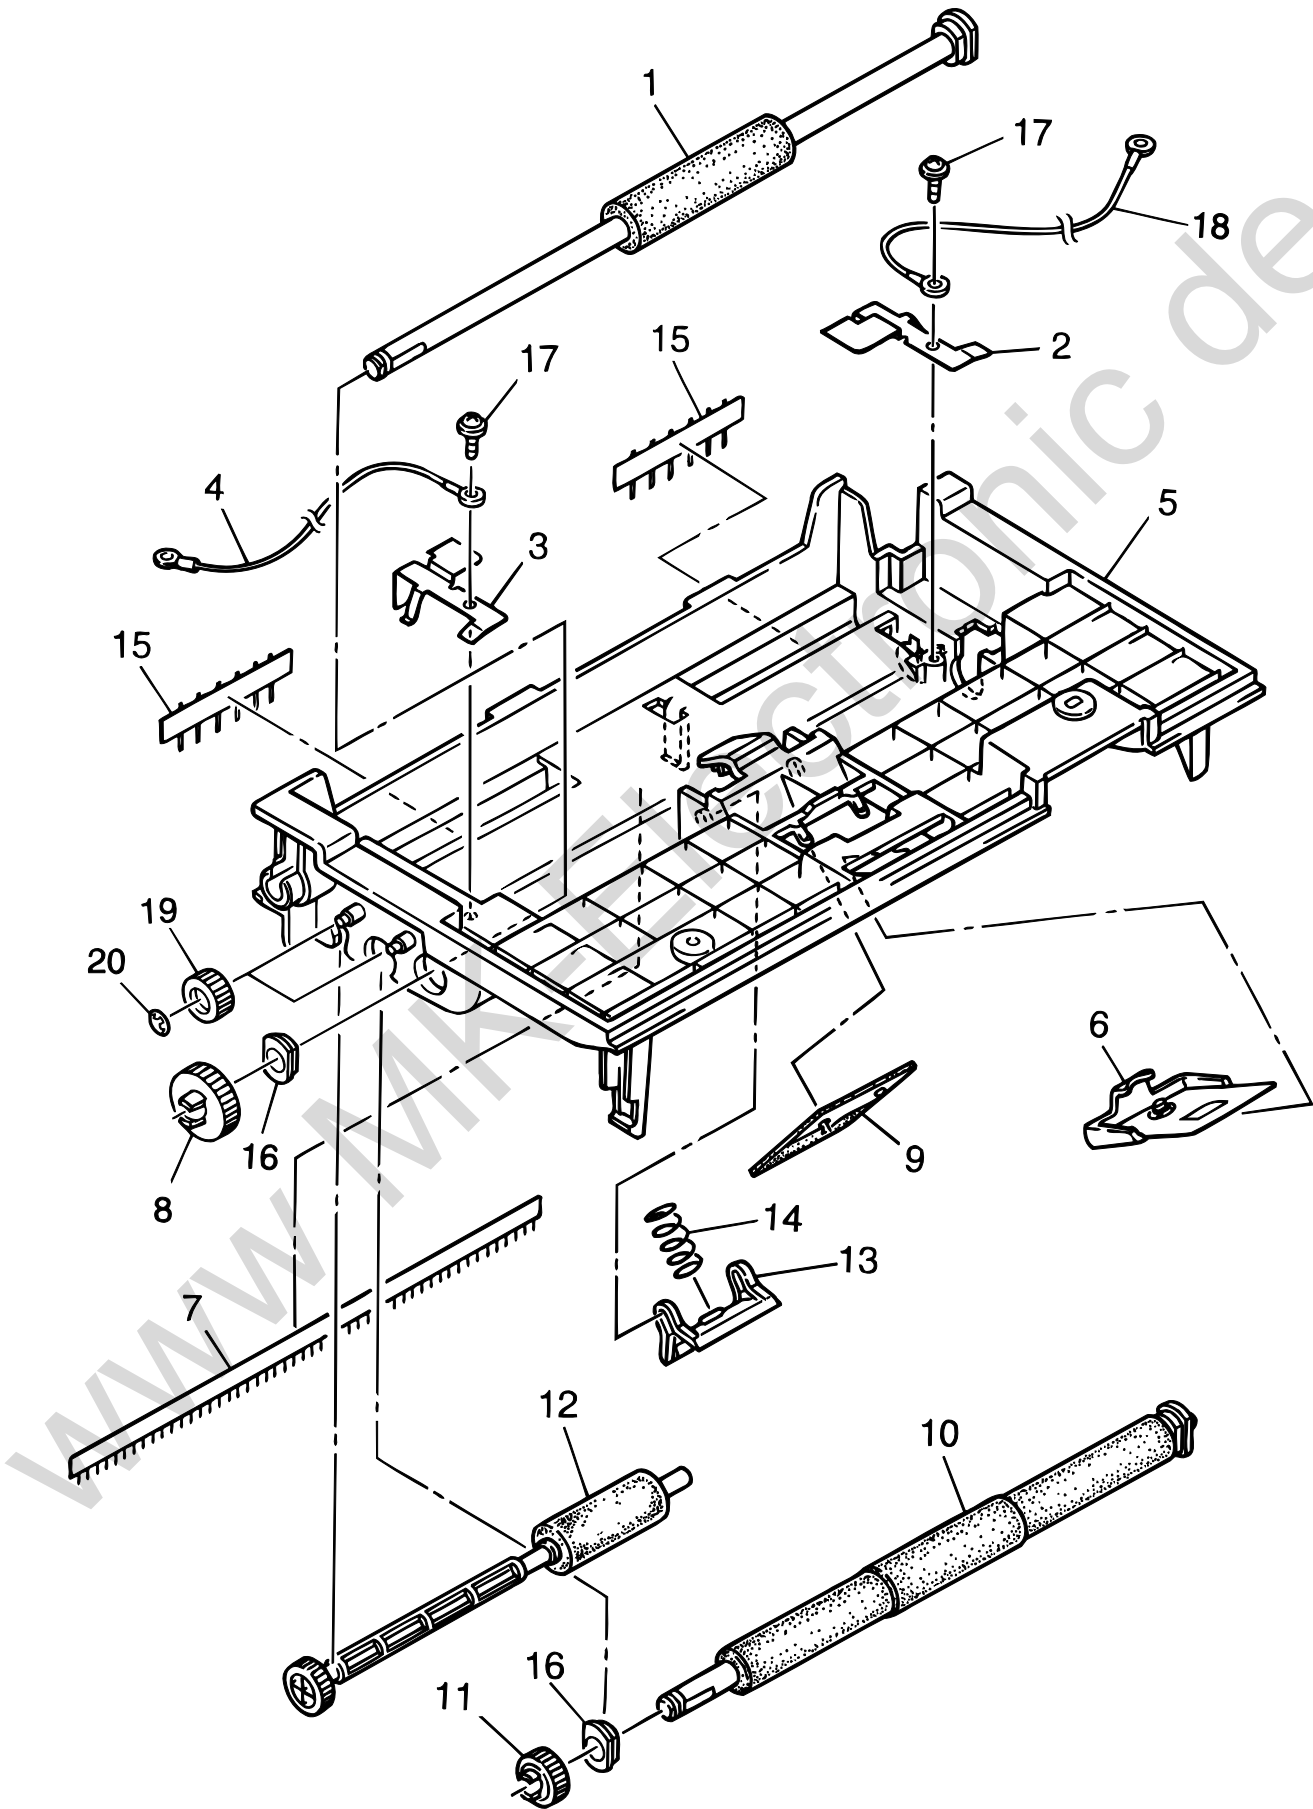

CABLES

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	40040002	CONN Cord-Wire (OPE)	1	
	2	4YB4120-1026P001	Speaker	1	
	3	3YS4111-3527P002	Connector Code (2nd Tray)	1	
	4	4YS4111-3441P001	P.W.A. Connector Cord	1	(CIS)
	5	4YS4111-3442P001	P.W.A. Connector Cord	1	(PC1/2)
	6	1051070C0001	TFC-16813 Core	2	(FAN/Speaker)
	7a	3YS4011-1329P002	AC CORD A	1	Australian
	7b	4YS3512-1485P001	AC CORD	1	ODA Note 2
	7c	236A6058P0001	AC CORD	1	OEL Note 1
4	7d	40483802	AC CORD A	1	CHN only
	8	4YS4111-5581P001	Cord (TEL1-TEL2)	1	
	9a	236A3161P0002	TEL/LINE Cable	1	ODA
	9b	4YB3522-1297G001	TEL/LINE Cord	1	TENOVIS(BOSCH),GERNote 1
	10	105A1051C3002	TR-28-16-20 Core	1	(2nd Tray Cable)
	11				
	12				
	13				
	14	105A1068C1004	5FC-8 Core	1	(Line Cable)
	15	105A1070C0004	TFC-23-11-14 Core	1	(OPE Cable)
	16	105A1070C0003	Ferrite Core E	1	(Sensor Cable)
	17	4YB4120-1094P0001	Secondary Battery	1	
	18	4LP-1466	Snap Band		
	19	4LP-6401-B1	Tying Cord	1	
	20				
	21				
	22	40808001	CONN Cord-PSU (High/Low)	1	

Note 1: Parts will be supplied by OUK.

Note 2: Parts will be supplied by ODA.

This exploded view diagram illustrates the assembly of a server chassis. The main components and their assembly points are as follows:


- Chassis and Front Panel:** The main chassis (bottom) features a front panel (1) with a bezel (2). The bezel is secured by screws (3) and includes a handle (4). The front panel is connected to the chassis via a cable (5) and a connector (6).
- Internal Components:** The chassis includes a fan (7) and a power supply unit (8). The power supply is connected to the chassis via a cable (9) and a connector (10). The fan is connected to the chassis via a cable (11) and a connector (12).
- Connectors and Cables:** Various connectors and cables are shown, including a USB connector (13), a SATA connector (14), a power connector (15), and a fan connector (16). These are connected to the chassis via cables (17, 18, 19, 20, 21, 22).
- Assembly Points:** The diagram shows the assembly points for the front panel, fan, power supply, and various connectors. The assembly points are labeled with letters A through J.

OPTION TELEPHONE(US)

OKIFAX 5650

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P011	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3				
	4				
	5				
	6	4YA4129-1005G001	Board-TEL-U	1	
	7	1PP4120-1096P001	Base-Cradle	1	
	8	3PP4120-1097P001	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G004	Handset	1	
	11				
	12	4YS4111-5552P001	Connection-Cord	1	
	13				
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15				
	16				
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	

Section 8 OPTION TELEPHONE (US)

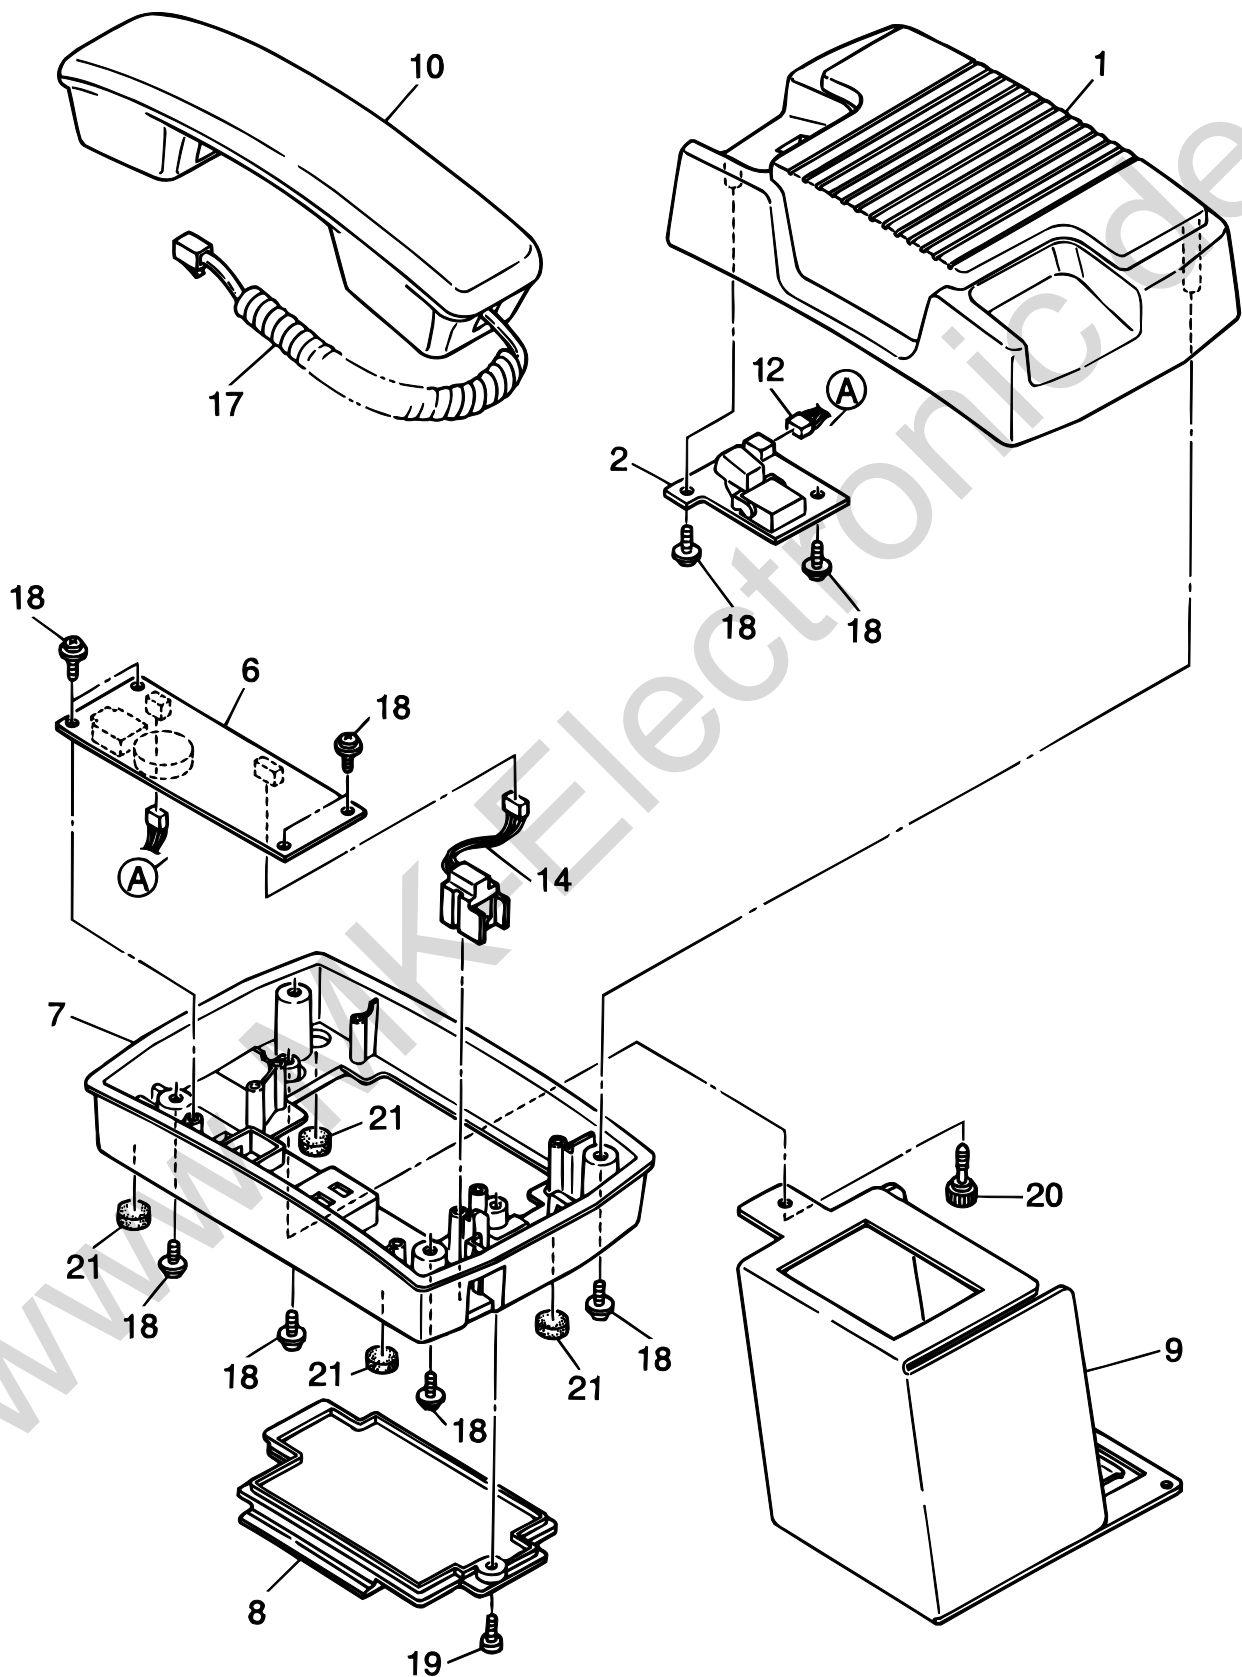


OPTION TELEPHONE(AG)

LANIER

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P012	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3				
	4				
	5				
	6	4YA4129-1005G001	Board-TEL-U	1	
	7	1PP4120-1096P002	Base-Cradle	1	
	8	3PP4120-1097P002	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G001	Handset	1	
	11				
	12	4YS4111-5552P001	Connection-Cord	1	
	13				
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15				
	16				
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	

Section 8 OPTION TELEPHONE (UK, ITA, NOR, DEN, BEL)

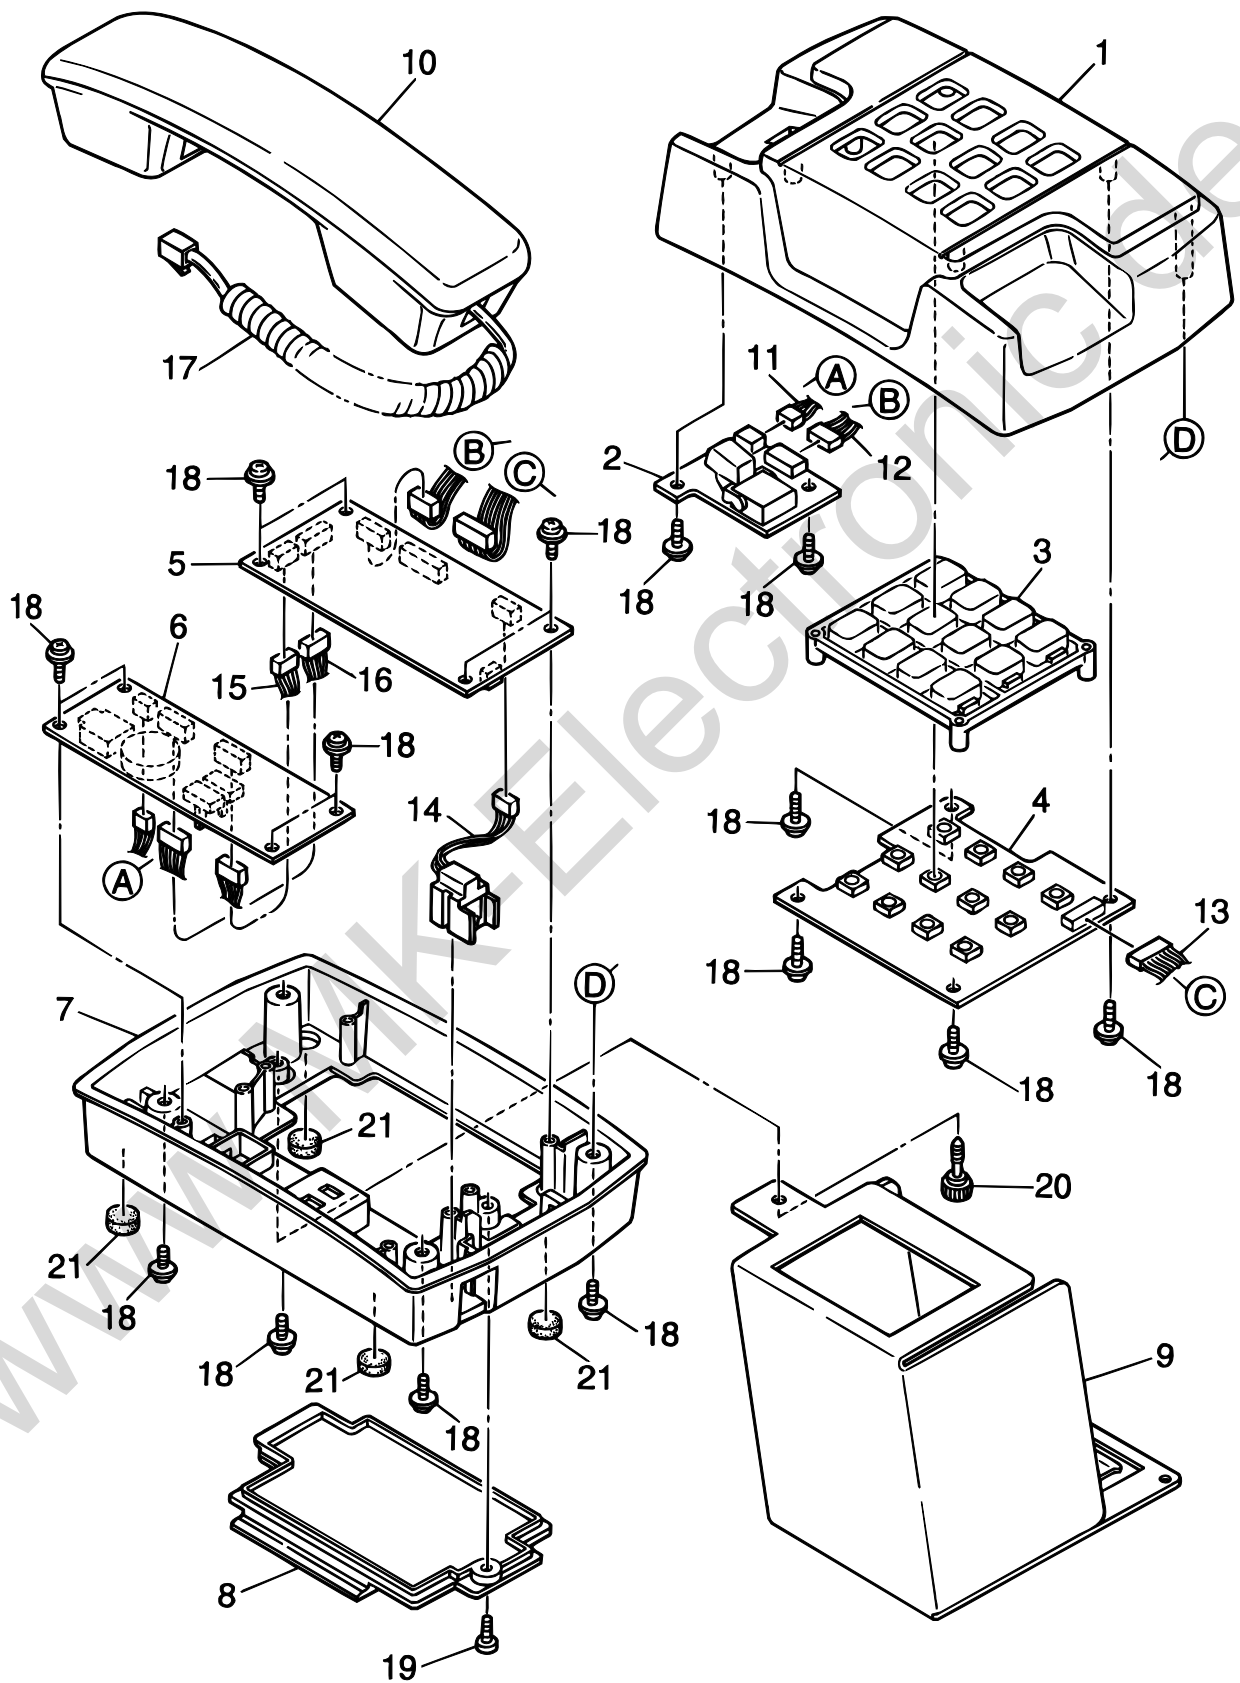

OPTION TELEPHONE(ABX)

LANIER

Rev.	No.	Ok! Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P002	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3	2PP4120-1068P002	Ten-Key	1	
	4	4YA4129-1003G001	Board-Tenkey	1	
	5	4YU3528-1022G014	Board-TEL W1	1	
	6	4YA4129-1004G001	Board-NTIF	1	
	7	1PP4120-1096P002	Base-Cradle	1	
	8	3PP4120-1097P002	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G001	Handset	1	
	11	4YS4111-5553P001	Connection-Cord	1	
	12	4YS4111-5552P001	Connection-Cord	1	
	13	4YS4111-5556P001	Connection-Cord	1	
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15	4YS4111-5554P001	Connection-Cord	1	
	16	4YS4111-5555P001	Connection-Cord	1	
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P011	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3				
	4				
	5a	4YU3528-1037G011	Board-TEL-11	1	SWITZ, AUS
	5b	4YU3528-1037G003	Board-TEL-3	1	HOL, OEL-INT'L
	5c	4YU3528-1038G013	Board-TEL-13	1	GER
	5d	4YU3528-1033G018	Board-TEL-W2F	1	FRA
	5e	4YU3528-1037G007	Board-TEL-7	1	OKI-INT'L
	6a	4YA4129-1004G002	Board-NTIF	1	SWITZ, AUS
	6b	4YA4129-1004G003	Board-NTIF	1	HOL,OEL-INT'L,GER,OKI-INT
	6c	4YA4129-1004G004	Board-NTIF	1	FRA
	7	1PP4120-1096P001	Base-Cradle	1	
	8	3PP4120-1097P001	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G004	Handset	1	
	11	4YS4111-5553P001	Connection-Cord	1	
	12	4YS4111-5552P001	Connection-Cord	1	
	13				
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15				
	16	4YS4111-5555P001	Connection-Cord	1	
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	


OPTION TELEPHONE(ABB,AB,FTZ,FR)

LANIER

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P012	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3				
	4				
	5a	4YU3528-1037G011	Board-TEL-11	1	ABB
	5b	4YU3528-1037G009	Board-TEL-9	1	AB
	5c	4YU3528-1038G013	Board-TEL-13	1	FTZ
	5d	4YU3528-1033G018	Board-TEL-W2F	1	FR
	6a	4YA4129-1004G002	Board-NTIF	1	ABB
	6b	4YA4129-1004G003	Board-NTIF	1	AB, FTZ
	6c	4YA4129-1004G004	Board-NTIF	1	FR
	7	1PP4120-1096P002	Base-Cradle	1	
	8	3PP4120-1097P002	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G001	Handset	1	
	11	4YS4111-5553P001	Connection-Cord	1	
	12	4YS4111-5552P001	Connection-Cord	1	
	13				
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15				
	16	4YS4111-5555P001	Connection-Cord	1	
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4120-1095P011	Cradle	1	
	2	4YA4129-1006G001	Board-Hook	1	
	3	2PP4120-1068P001	Ten-Key	1	
	4	4YA4129-1003G001	Board-Tenkey	1	
	5	4YU3528-1022G014	Board-TEL W1	1	
	6	4YA4129-1004G001	Board-NTIF	1	
	7	1PP4120-1096P001	Base-Cradle	1	
	8	3PP4120-1097P001	Cover-Terminal	1	
	9	3PA4120-1140G001	Attachment-Assembly	1	
	10	4YB3512-2029G004	Handset	1	
	11	4YS4111-5553P001	Connection-Cord	1	
	12	4YS4111-5552P001	Connection-Cord	1	
	13	4YS4111-5556P001	Connection-Cord	1	
	14	4YS4111-5551P001	Moduler-Jack-Cord	1	
	15	4YS4111-5554P001	Connection-Cord	1	
	16	4YS4111-5555P001	Connection-Cord	1	
	17	4YS3522-1252G002	Cord-Handset	1	
	21	4PB4016-1960P001	Rubber-Hoot	4	


Section 8 OPTION TELEPHONE (HOL, GER, FRA, SWITZ, AUT, INT'L)

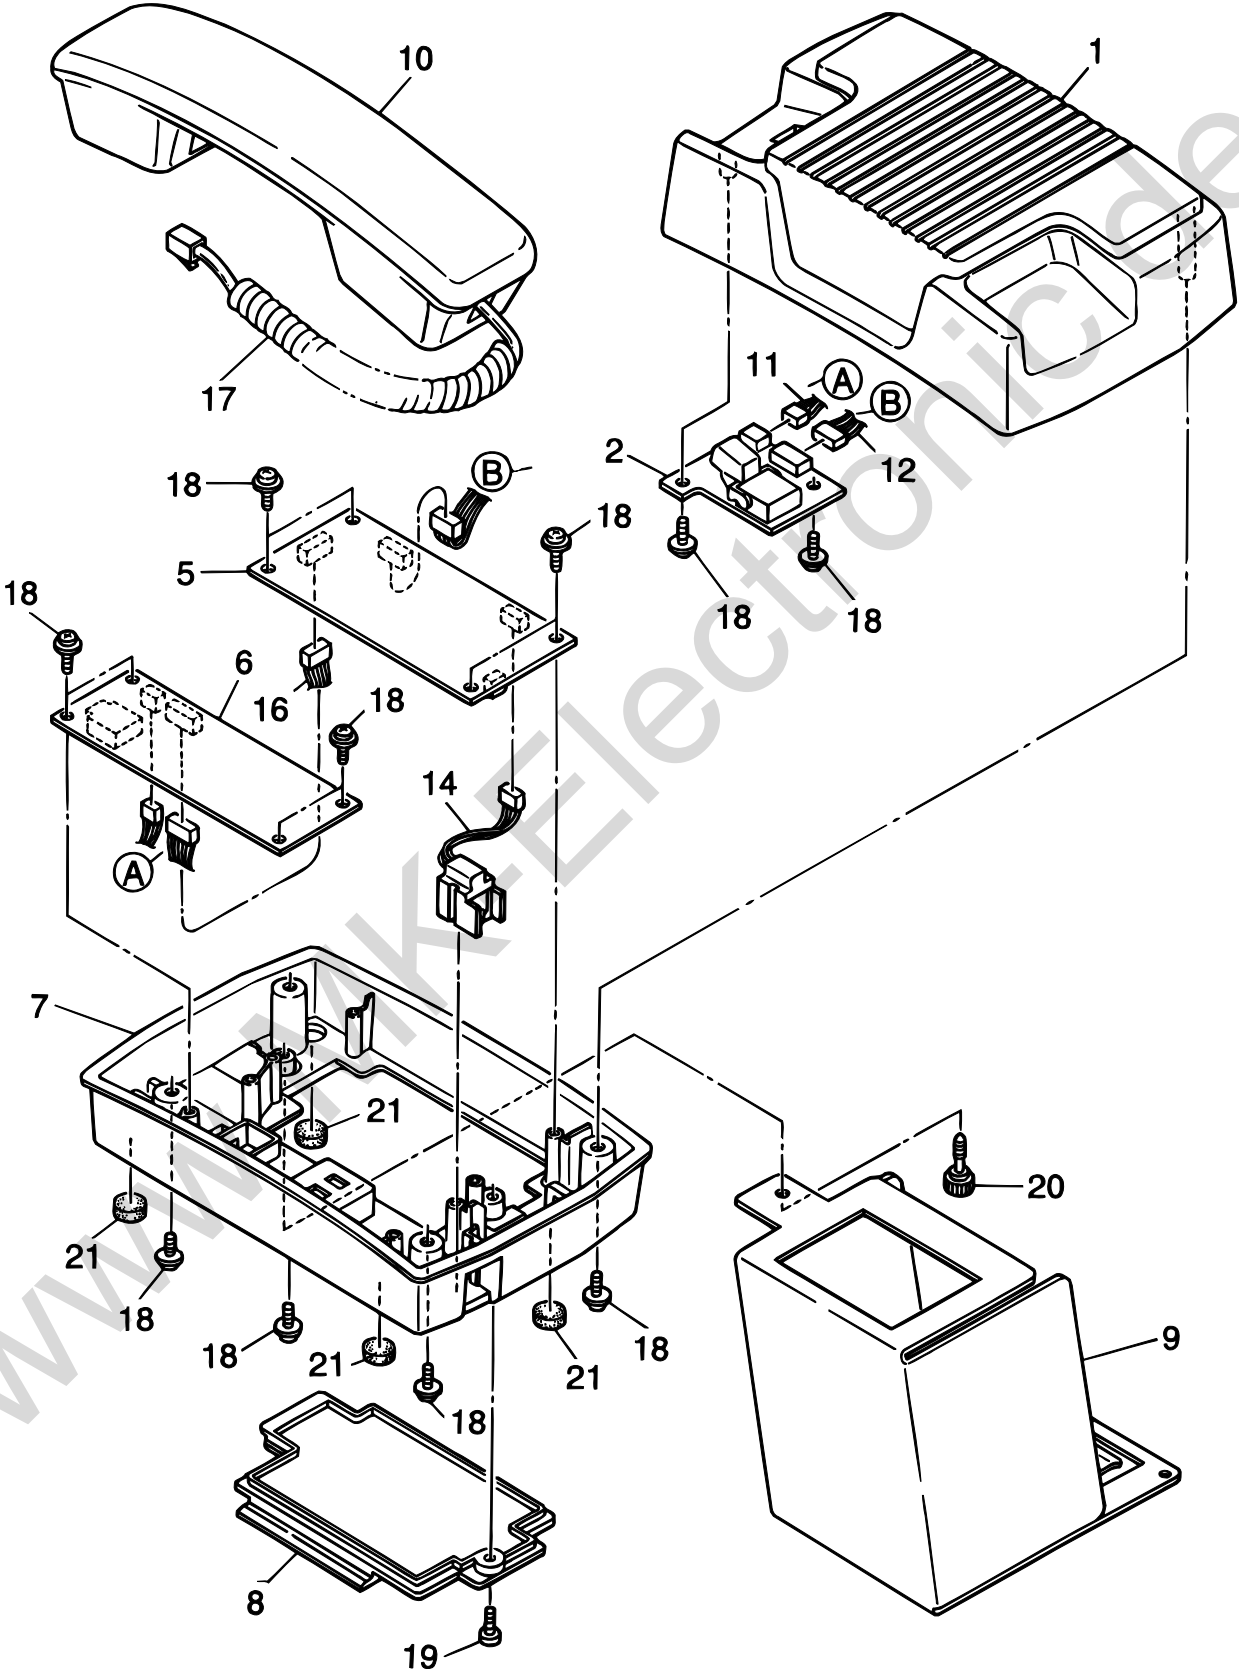

Paper Feeder

Rev.	No.	Oki Parts No.	Description	Q'ty	Remarks
	1	1PP4122-1401P001	Plate, Upper	1	
	2	3PA4122-1370G001	Sheet Guide Assembly	1	
	3	1PA4122-1369G001	Front Cover Assembly	1	
	4	3PA4122-1371G001	Inner Guide Assembly	1	
	5	1PA4122-1362G004	Cassette Assembly (2nd Tray)	1	
	6	4PP4120-1009G001	Separation (F) Frame Assembly	1	
	7	1PP4122-1323P001	Cover, Rear	1	
	8	4PB4122-1441P001	Stick Finger	1	
	9	1PA4122-1366G001	Hopping Frame Assembly	1	
	10	4PP3522-3568P001	Bushing, Metal (ADF)	1	
	11	4PP4122-1207P001	Gear (Z70)	1	
	12	3PP4122-1331P001	Lever, Sensor (P)	1	
	13	3PA4122-1393G001	Feed Roller Assembly	1	
	14	3YS4111-3528P001	Cable & Connector	1	
	15	3PB4122-1399P001	Stepping Motor	1	
	16	4PP4122-1384G001	Bracket	1	
	17	4PP4122-1383P001	Gear (Z24)	2	
	18	4PP4122-1226P001	Gear (Z87/Z60)	1	
	19	2PP4122-1389P001	Plate, Bottom	1	
	20	1PA4122-1365G001	Second Cassette Guide (L) Assembly	1	
	21	3PA4122-1367G001	Hopping Roller Assembly	1	
	22	1YX4122-1364G002	Second Cassette Guide (R) Assembly	1	
	23	4PB4122-1382P001	One-way Clutch Gear	1	
	24	4YA4046-1651G002	TQSB-2 PCB	1	
	25	3PA4122-1372G001	Tail Guide Assembly	1	
	26	4PP4122-1238P002	Separation Spring	1	
	27	4PP4122-1184P001	Cassette Lock Lever	1	
	28	4PP4122-1347P001	Locks Spring	1	
	29	4PP4122-1217P001	Pull Block	1	
	30	4PP4122-1398P002	Sheet Spring	1	
	31	4PP4122-1339G001	Sheet Link (L)	1	
	32	4PP4122-1338G001	Sheet Link (R)	1	

PAPER FEEDER (1/2)

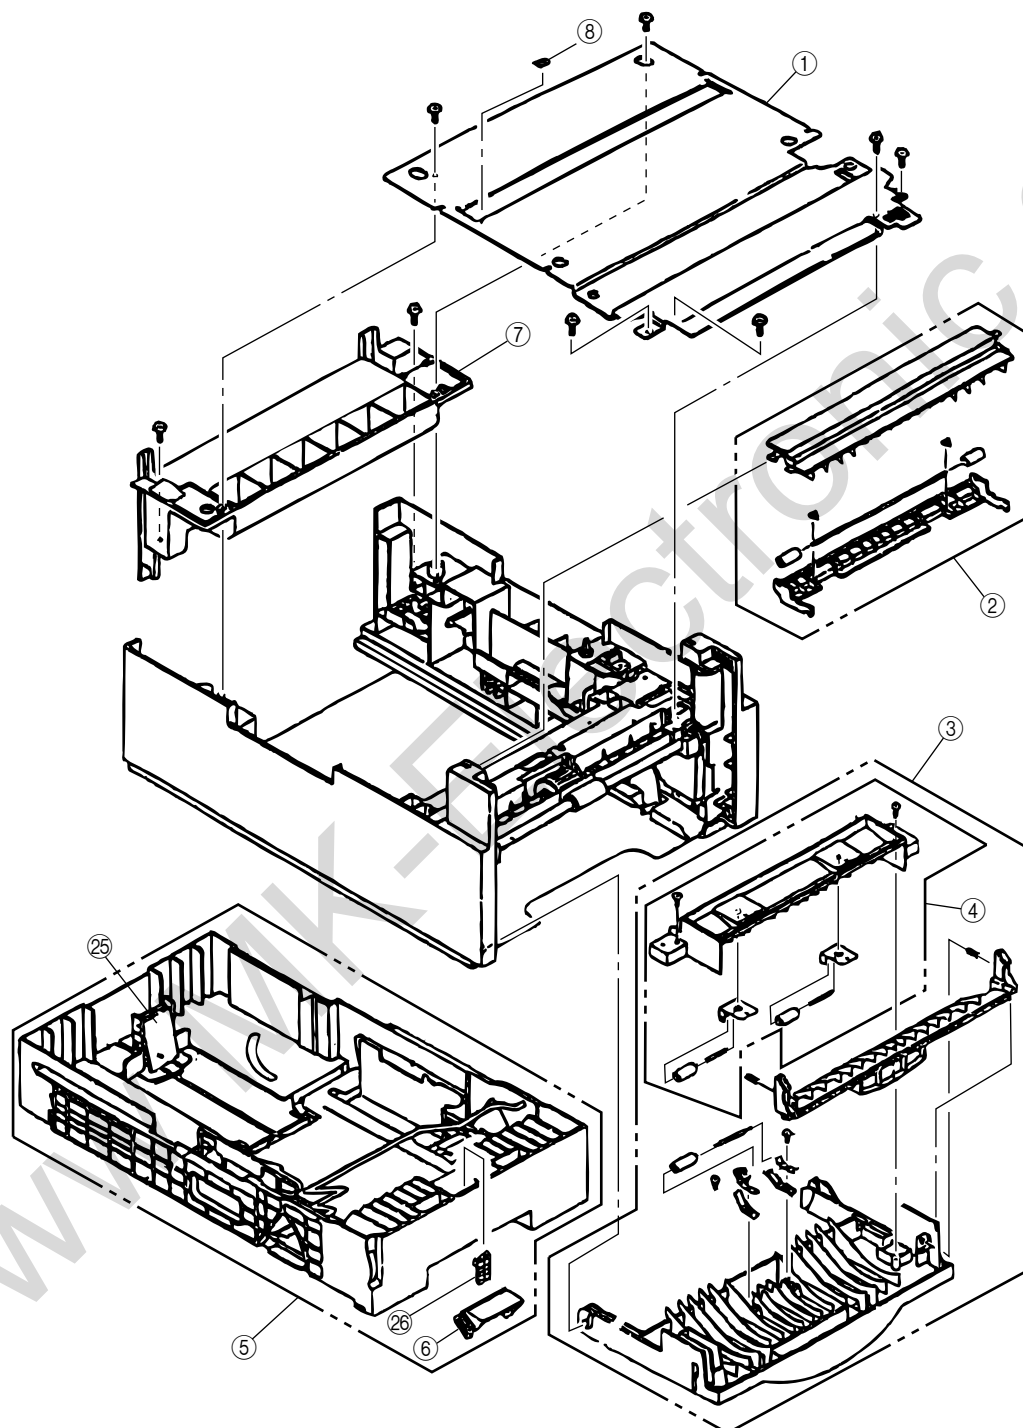

PAPER FEEDER (2/2)

